



SERIOUS HEAD PROTECTION

PIVOT & SCREWS KIT

SE03/SE05 VISORS

Remove left and right side shield pivot screws using BELL RACING hex wrench. Remove left and right side SV brake screws and SV brake washers. Remove the old shield and if necessary replace the pivot and friction washers. New washers have a self-adhesive side to be applied on the helmet shell. Place the new shield over the well centred friction washers and screw in the pivot screws until snug.

⚠ DO NOT OVERTIGHTEN. Repeat this procedure on the other side. Put the SV brake washers back in place. Adjustment of the excentric buttons may be required. Use the BELL RACING hex wrench. Rotate the buttons so that the shield latches readily yet securely when pulled down by the top centre edge with one hand.

CONTENTS:

- A. 2 Aluminium Pivots
- B. 2 Pivot Washers
- C. 2 Brake Friction Washers
- D. 2 SV Brake Washers
- E. 2 Allen Screws for Brake
- F. 1 Allen Screws for Excentric
- G. 1 Excentric Button
- H. 1 Excentric Spacer

MOUNTING:

