



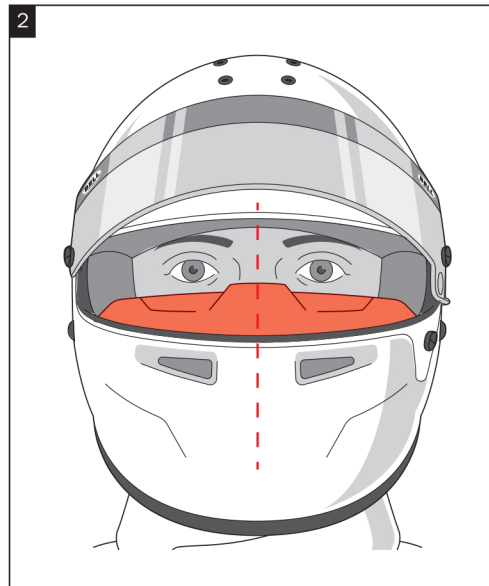

SERIOUS HEAD PROTECTION

⚠ IMPORTANT.

Read this notice before inserting the Breath Deflector in your helmet!

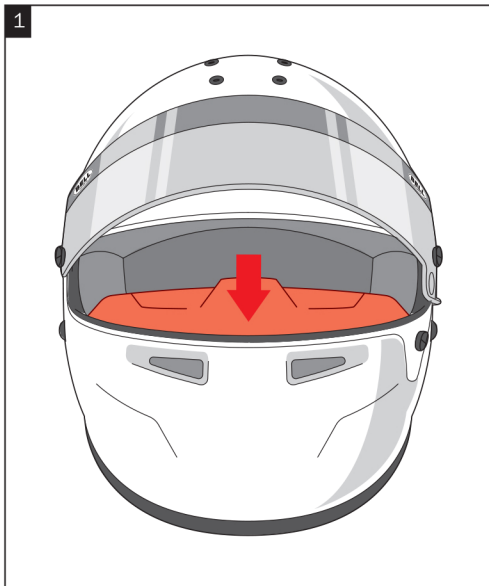

1. Insert the breath deflector between the shell and the face piece, with the protruding center facing outwards.

2. Center to field of vision.